

## Loading va-Q-lite 23 with va-Q-gel & va-Q-pad


For +5°C shipments

### Step 1

Open the lid of the va-Q-lite 23 and remove the top cardboard tray.

Note:

Before loading, the va-Q-pad 00G and va-Q-gel +05G have to be preconditioned as per the respective SOP instructions for the desired temperature range.

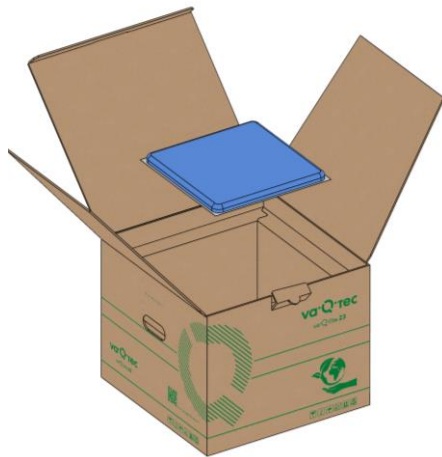


### Step 2

Load 1 piece of va-Q-gel 33332 +05G on the bottom of the va-Q-lite 23.



### Step 3

Place the product inside the provided inner cardboard and load it into the va-Q-lite 23.


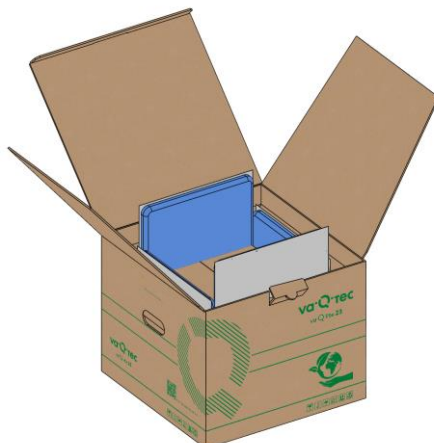


### Step 4

Place 1 piece of va-Q-gel 33242 +05G on each side of va-Q-lite 23.

## Step 5

Place 1 piece of va-Q-pad 37364 00G EL on top of the product.

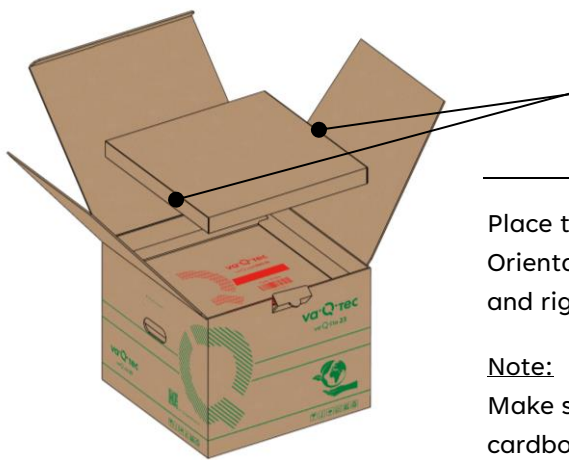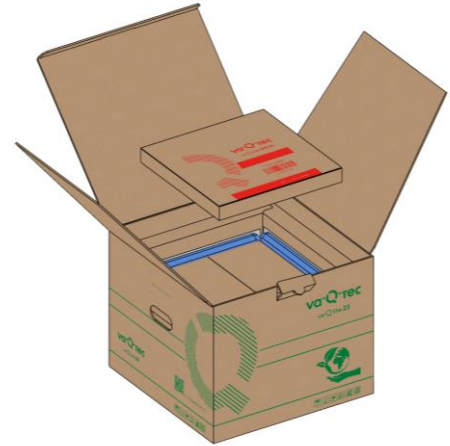

Flap left & right side

## Step 6

Place the top cardboard tray on top of the cardboard ring.  
Orientation: The flaps of the cardboard tray must be placed on the left and right side of the va-Q-lite 23.

**Note:**

Make sure there is no gap between the cardboard ring and the top cardboard tray.

## Step 7

Close the va-Q-lite 23 and use adhesive tape to seal the va-Q-lite 23.

